 



SYMO 3000 CYLINDER CORES WITH PLATE LEVERS

Symo 3000 cylinder cores can be installed, repositioned or replaced quickly without tools, simply by using the removal key


Inserting the cylinder core

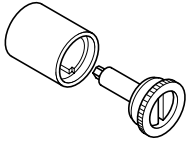

 Remove protective cap from cylinder housing




 Push the cylinder core with the inserted key into the cylinder housing

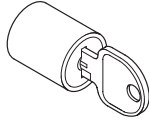


Exert light pressure until cylinder core snaps into place

 Removing the cylinder core

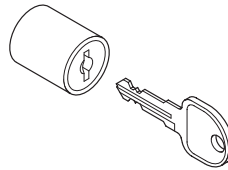


 The cylinder core can only be removed from the cylinder housing by using the removal key

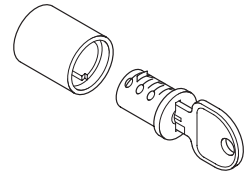

Insert the removal key into the cylinder housing and withdraw under slight pressure

 Cylinder core

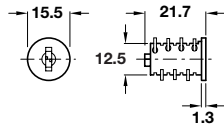

! > *Master key 210.11.001, can be used with the keyed alike keys

- > Cylinder cores for left or right hand use
- > 6 plate levers = 2600 different key changes possible
- > Nickel-plated zinc alloy housing, brass plate levers
- > Accessories: 2x keys
- > Order qty: 1 pc

Key type	Cat. No.
Random key changes (no master key possible)	210.40.600
Keyed alike (master key possible*)	
SH 0001	210.40.601
SH 0002	210.40.602
SH 0003	210.40.603
SH 0004	210.40.604
SH 0005	210.40.605
SH 0006	210.40.606
SH 0007	210.40.607
SH 0008	210.40.608
SH 0009	210.40.609
SH 0010	210.40.610
SH 0011	210.40.611
SH 0012	210.40.612
SH 0013	210.40.613
SH 0014	210.40.614
SH 0015	210.40.615
SH 0016	210.40.616
SH 0017	210.40.617
SH 0018	210.40.618
SH 0019	210.40.619
SH 0020	210.40.620

Master key



- > MK1 for keyed alike cylinder cores
- > Order qty: 1 pc

Master keys	Cat. No.
MK1	210.11.001
MK2	210.11.002
MK3	210.11.003

Removal key



- > For both keyed alike cylinder cores and random key cores
- > Order qty: 1 pc

	Cat. No.
Removal key	210.11.090