 


WASTE BIN DOOR OPENING SYSTEMS

FOOT OPERATED DOOR OPENER

The pedal is mounted underneath the front edge of the cabinet floor with the counterplate on the inside of the door. Light foot pressure on the pedal releases the magnetic catch and causes the rubber expander cord between the cabinet floor and the base shelf to pull base shelf and door forward out of the cabinet.

Foot operated door opener, for hinged door cabinets

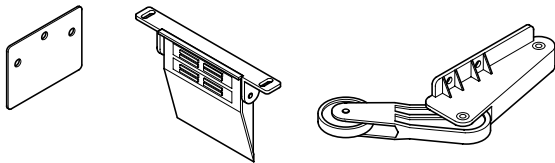


! Door openers do not work with systems that incorporate soft close mechanisms

- > For hinged door cabinets
- > Includes pedal with magnetic catch, counterplate and spring-loaded roller arm
- > Light foot pressure on the pedal releases the magnetic catch and causes the spring-loaded roller arm to push the door open. The waste bin does not swing out with the door unless the bin is door mounted or has a follower fitted
- > Brown plastic pedal, black lacquered steel counterplate and white plastic spring loaded roller arm
- > Note: Not for use in commercial high volume use such as doctors and dentist surgeries
- > Order qty: 1 pc



Door opener	Cat. No. 502.15.033
-------------	------------------------

 Foot pedal for light weight bins, for door front fixing cabinets

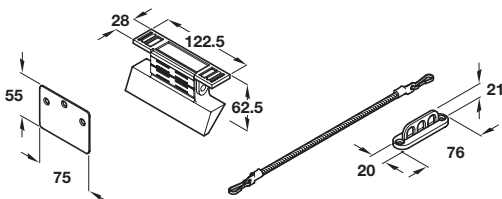

- > For door front fixing cabinets
- > Includes pedal with magnetic catch, counterplate and draw spring
- > Plastic aluminium effect metallic paint coated pedal with black lacquered steel counterplate
- > Note: Not for use in commercial high volume use such as doctors and dentist surgeries
- > Order qty: 1 pc



Usage	Cat. No.
For medium sized drawer mount bins	502.15.260
For tall sized bins	502.15.250

KITCHEN ACCESSORIES 2015, © Hafele U.K. Ltd 2015. Dimensional data not binding. We reserve the right to alter specifications without notice.