 


FOOT OPERATED DOOR OPENER

1

The pedal is mounted underneath the front edge of the cabinet floor with the counterplate on the inside of the door. Light foot pressure on the pedal releases the magnetic catch and causes the rubber expander cord between the cabinet floor and the base shelf to pull base shelf and door forward out of the cabinet.

Foot operated door opener, for hinged door cabinets

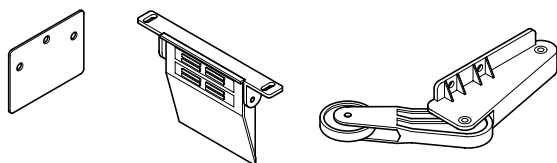


- > For hinged door cabinets
- > Includes pedal with magnetic catch, counterplate and spring-loaded roller arm
- > Light foot pressure on the pedal releases the magnetic catch and causes the spring-loaded roller arm to push the door open. The waste bin does not swing out with the door unless the bin is door mounted or has a follower fitted
- > Brown plastic pedal, black lacquered steel counterplate and white plastic spring loaded roller arm
- > Note: Not for use in commercial high volume use such as doctors and dentist surgeries
- > Order qty: 1 pc



Door openers do not work with systems that incorporate soft close mechanisms

	Cat. No.
Door opener	502.15.033

 Foot pedal for light weight bins, for door front fixing cabinets

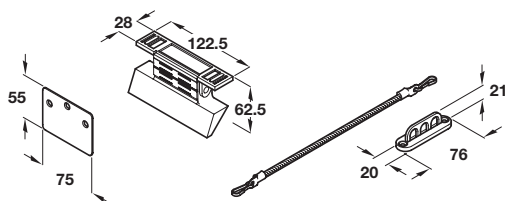

- > For door front fixing cabinets
- > Includes pedal with magnetic catch, counterplate and draw spring
- > Plastic aluminium effect metallic paint coated pedal with black lacquered steel counterplate
- > Note: Not for use in commercial high volume use such as doctors and dentist surgeries
- > Order qty: 1 pc



For use with Euro-Cargo or Euro-Cargo-S bins only. Shown on pages 175 and 176

Usage	Cat. No.
For medium sized drawer mount bins	502.15.260
For tall sized bins	502.15.250

PAGE AMENDED
10.07.17/1