 


- > In order to avoid interference between locks, a minimum distance of 100 or 150 mm must be maintained between installed locks.
- > If the distance is less than this minimum, continuous communication will take place between the locks, which will drain the battery. In order to avoid unnecessary battery draining, do not insert the battery until start-up takes place.
- > For applications that require a smaller distance, the FT 200 can be used in combination with the EFL 3 instead.

 
Installation

Installation of hinged door

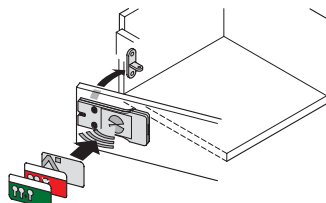


In order to unlock the EFL 30, the transponder card must be held against the hinged door

Installation on cabinet

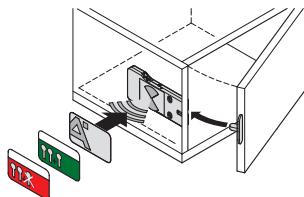


In order to open the EFL 30, the transponder card must be held against the side of the cabinet

 Installation on drawer

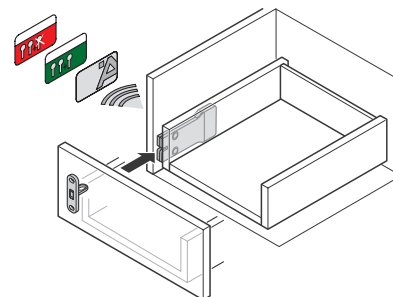

 In order to open the EFL 30, the transponder card must be held against the side of the cabinet

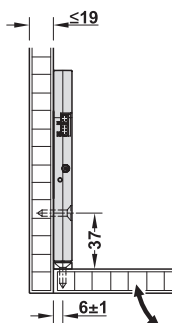

- > Please order AAA batteries (910.54.986) separately
- > Please order programming and clearing key card, Dialock Manager app licence or software separately

	Cat. No.
EFL 30 furniture lock	237.59.070
EFL 30C Furniture lock with additional feedback contact	237.59.071