



Soft close bracket 356.37.571 and damper 356.37.650


Soft close damper

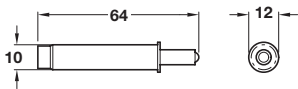

Installation

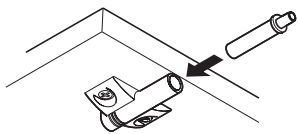

Insert door buffer into adapter housing

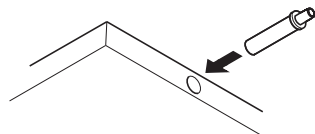


Insert door buffer into drill hole in front edge of cabinet

- > Grey plastic
- > For use with heavy duty doors
- > 1 set consists of:
 - 25x Soft close dampers
- > Must be fitted 10-15 mm from hinge side in the cabinet
- > Order qty: 1 set

Finish	Cat. No.
Grey	356.37.650

Soft close bracket

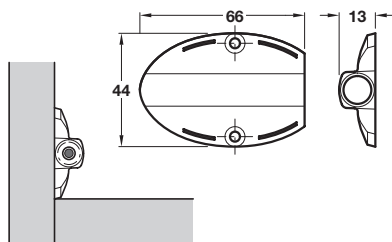


- > Plastic
- > 1 set consists of:
 - 25x Soft close brackets
- > Order qty: 1 set



Finish	Grey	Nickel
Cat. No.	356.37.571	356.37.671

Soft close bracket

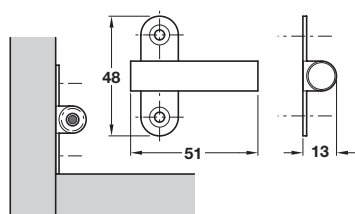

- > Plastic
- > 1 set consists of:
 - 25x Soft close brackets
- > Order qty: 1 set



Finish	Grey
Cat. No.	356.37.591