


TAMBOUR DOOR FITTINGS

Plastic fittings and tracks to create tambour doors. For cabinet door requirements where space is at a minimum. The door shutter folds away neatly and is concealed when open.

- > Vertical or horizontal running direction
- > For inset installation
- > Running track and bend for groove mounting
- > Optional with lock strip or handle profile

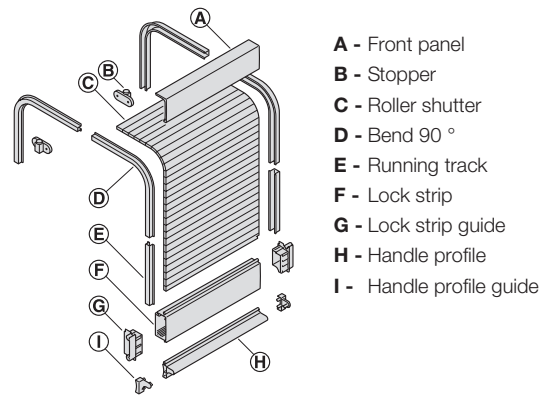


For cabinet dimensions

Running direction	Internal cabinet height	Internal cabinet width
Vertical	Max. 1500 mm	Max. 900 mm
Horizontal	Max. 1200 mm	Max. 1600 mm

! Note: Handle and lock strip cannot be combined

! Risk of injury in case of vertical running direction (roller shutter falls down unbraked during closing). With larger cabinets, a counterbalancing mechanism must be used, please order Cat. No. **442.09.903** separately

Roller shutter

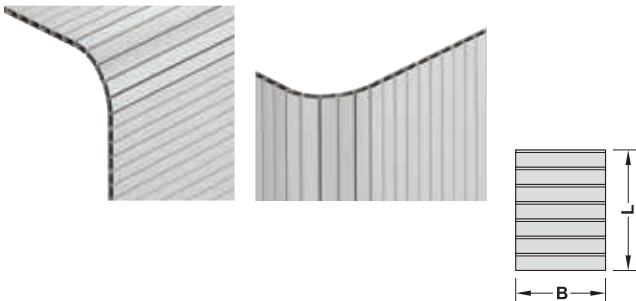


- > Stabilised with cotton adhesive tape
- > Plastic
- > Order qty: 1 pc

! The roller shutter weight of plastic roller shutters is approx. 2.7 kg/m²

Width x Length	Grey
800 x 1215 mm	442.06.120
1200 x 1620 mm	442.06.121

Tambour door slats

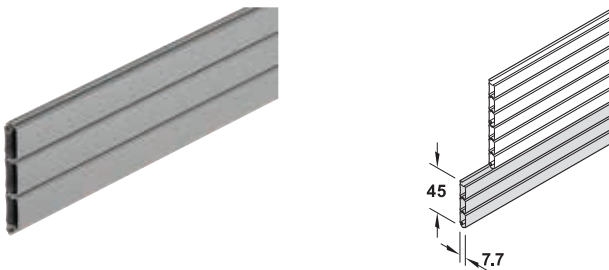

- > For assembling roller shutters, for replacing tambour door slats
- > Plastic
- > Block with 3 slats, can be cut to size
- > Order qty: 1 pc

! > Installation reference:
Cut tambour door slats to size, insert tambour door slats into each other and attach cotton adhesive tape

Length	Grey
2300 mm	442.06.020