



LEVER HANDLE SETS FOR DISABLED TOILET DOORS

These sets are designed to be used on swing, pivot, straight, sliding and leaf and a half/folding door sets.


- > With the door in the unlocked position the handle will be in the upright position with the indicator showing green.
- > When locked the handle is moved to the horizontal position and the indicator showing red.
- > It is recommended that a face fixed pull handle is mounted on the outer face; refer to **Section 1** for details

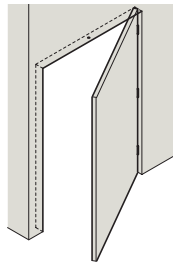


Swing door

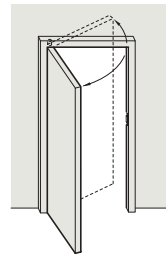


Pivot door

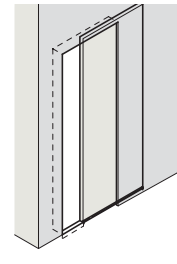


Straight sliding door

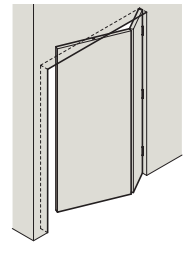

Sliding folding door

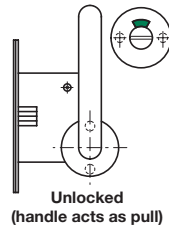

Unlocked
(handle acts as pull)

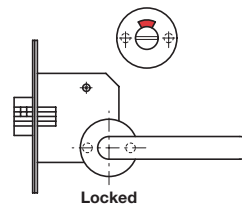

Locked

Lever handle, indicator and lock set



- > Unhanded
- > Large safety pattern lever handle
- > Emergency release indicator
- > Turn operated claw bolt lock
- > Self adhesive instruction badge 'Depress lever to lock'
- > Stainless steel
- > Bolt through fixings included
- > Order qty: 1 set

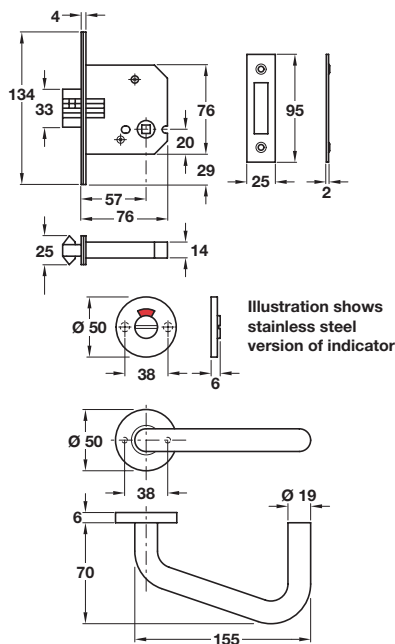


Image shown is for anti-clockwise operation - for clockwise operation the lock will need to be installed upside-down



Finish	Cat. No.
Satin stainless steel	911.78.019